

Remote Control

Key overview

Top



1 - Standby / On

To switch the TV on or back to Standby.

2 - Youtube

To open Youtube.

3 - SMART INFO (Only in Professional Mode ON)

To show information provided by the Hotel.

4 - NETFLIX

To open the Netflix App directly. With the TV switched on or from standby.)

- If you have a Netflix membership subscription, you can enjoy Netflix on this TV. Your TV must be connected to the Internet.

- To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a TV in standby.

www.netflix.com


5 - Weather (Only in Professional Mode ON)

To show the weather information of your location.

6 - Google Cast (Only in Professional Mode ON)

To mirror the content of your mobile device display on to the TV.

Middle

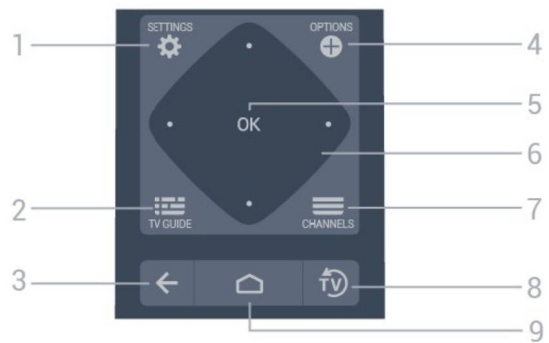

1 - SETTINGS

To open the settings menu.

2 - TV GUIDE

To open a list of the current and scheduled TV programmes of your channels.

3 - BACK

- To switch back to the previous channel you selected.

- To return to previous menu.

4 - OPTIONS

To open or close the options menu.

5 - OK key

To confirm a selection or setting.

6 - Arrow / navigation keys

To navigate up , down , left or right .

7 - Channel

To switch to the next or previous channel in the channel list.

8 - EXIT

To switch back to watching TV.

9 - HOME

To open the Home menu.

Bottom



1 - Volume

To adjust the volume level.

2 - Colour keys

Direct selection of options.

3 - CLOCK

To display the clock.

4 - Channel

To switch to the next or previous channel in the channel list.

5 - Mute

To mute the sound or to restore it.

3.2

IR Sensor

The TV can receive commands from a remote control that uses IR (infrared) to send commands. If you use such a remote control, always make sure you point the remote control at the infrared sensor on the front of the TV.

Warning

Do not put any objects in front of IR sensor of the TV, it may block the IR signal.

3.3

Cleaning

Your remote control is treated with a scratch-resistant coating.

To clean the remote control, use a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the remote control.




Switching On and Off

4.1


On or Standby

Make sure the TV is connected to the mains AC power. Connect the supplied power cord to the AC in connector at the back of the TV. The indicator light at the bottom of the TV lights up.

Switch on

Press  on the remote control to switch the TV on. Alternatively, press  /  Home. You can also press the small joystick key on the back or bottom of the TV to switch the TV on in case you can't find the remote control or its batteries are empty.

Switch to standby

To switch the TV to standby, press  on the remote control. You can also press the small joystick key on the back or bottom of the TV.

In standby mode, the TV is still connected to the mains power but consumes very little energy.

To switch off the TV completely, disconnect the power plug.

When disconnecting the power plug, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

4.2

Keys on TV

If you lost the remote control or its batteries are empty, you can still do some basic TV operations.


To open the basic menu...

1 - With the TV switched on, press the joystick key on the back or bottom of the TV to bring up the basic menu.

2 - Press left or right to select  Volume,  Channel or  Sources.

3 - Press up or down to adjust the volume or tune to the next or previous channel. Press up or down to go through the list of sources, including the tuner selection.

4 - The menu will disappear automatically.

To switch the TV on standby, select  and press the joystick key on the back or bottom of the TV.